

RÉGULATEUR DE NIVEAU À FLOTTEUR MÉCANIQUE RN-305



[FR] NOTICE D'INSTALLATION ET DE MAINTENANCE > 1

[EN] Instructions Manual > 5

A lire attentivement et à conserver pour consultation ultérieure.
To read carefully and to keep for later consultation.

1. Présentation du produit

Le régulateur mécanique de niveau stabilise automatiquement le niveau d'eau de votre piscine.




2. Contenu du colis

Description	Quantité
Cadre à sceller télescope/Skimmer	1
Couvercle pour cadre à sceller	1
Corps de régulateur de niveau	1
Raccord laiton long égal MF 3/8"	1
Flotteur de régulateur de niveau RN305	1
Robinet de régulateur mécanique RN305	1
Joint Ø30 x Ø16 x 1.5 SBR 70Sh	1

Elimination des emballages : Les éléments tels papiers, cartons, plastiques ou tout autre élément recyclable doivent être amenés dans un centre de tri adapté

3. Prescriptions d'installation

- Installer le régulateur indépendamment du système de filtration.
- Il est fortement conseillé de faire une réservation au niveau de l'arrivée d'eau dans le régulateur afin de pouvoir accéder ultérieurement à l'écrou et au joint se trouvant à l'extérieur de la cuve du régulateur.
- Vérifier que la hauteur de scellement sera bien compatible avec celle des skimmers et le niveau d'eau souhaité.
- Installer un robinet d'arrêt sur la canalisation d'alimentation d'eau.
- Lors de l'installation, bien vérifier que le flotteur est libre de tout mouvement
- Réaliser l'étanchéité des raccords à l'aide de 8 à 12 tours de ruban en PTFE (de type Téflon®)
- Régler le flotteur à la hauteur souhaitée et le bloquer sur la tige en serrant la vis de réglage
- Une fois ce réglage effectué, vérifier que l'alimentation en eau se coupe à la hauteur d'eau souhaitée (refaire le réglage de la hauteur du flotteur si nécessaire)

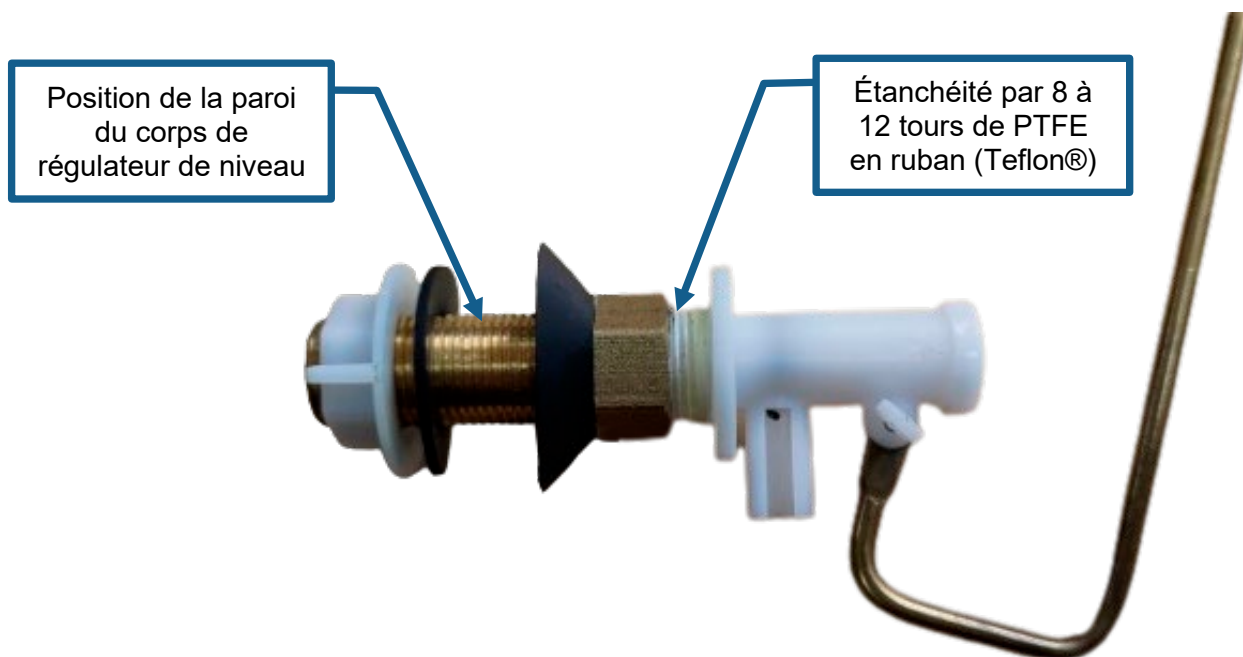

4. **Entretien et maintenance**

Pour éviter tout risque de blocage du robinet, un contrôle régulier est nécessaire.

ATTENTION

Le raccord en laiton MF 40 mm 3/8" permet le démontage du mécanisme de régulation de niveau sans avoir accès à l'extérieur de la cuve du régulateur. Cependant, il est nécessaire de bien bloquer le raccord en laiton avec une clé lorsque l'on souhaite démonter le système de régulation de niveau, de manière à ce que ces deux composants ne tournent pas en même temps. En effet, si le raccord en laiton venait à tourner, cela risquerait de desserrer l'écrou se trouvant à l'extérieur de la cuve et de créer ainsi une fuite au niveau du passage de paroi.

5. **Garantie**

Ce produit bénéficie des dispositions de garanties légales (dite de « conformité » et « contre les vices cachés ») auprès du consommateur final.

Notes



S.A. au capital de 7 000 000 € - R.C.S/Rennes B 333263846000 37

MECHANICAL FLOAT LEVEL CONTROLLER RN-305



[FR] NOTICE D'INSTALLATION ET DE MAINTENANCE > 1

[EN] Instructions Manual > 5

**A lire attentivement et à conserver pour consultation ultérieure.
To read carefully and to keep for later consultation.**

1. Product presentation

The mechanical float level controller automatically stabilises the water level in your pool.




2. Package contents

Description	Quantity
Telescopic lid frame	1
Telescopic lid frame lid	1
Level controller body	1
Brass fitting equal male/female 3/8"	1
Level controller float RN305	1
Mechanical level controller valve RN305	1
Gasket Ø30 x Ø16 x 1.5 SBR 70Sh	1

Disposal of packaging: Items such as paper, cardboard, plastic or any other recyclable item must be taken to a suitable sorting center

3. Installation instructions

- Install the level controller separately from the filtration system.
- It is strongly recommended that you make a reservation at the water inlet to the level controller, so that you can later access the nut and gasket on the outside of the level controller body.
- Check that the sealing height will be compatible with that of the skimmers and the desired water level.
- Install a shut-off valve on the water supply line.
- During installation, check that the float can move freely.
- Use 8 to 12 wraps of PTFE tape (such as Teflon® tape) on the connections to ensure that they are leaktight.
- Adjust the float to the desired height and lock it on the rod by tightening the adjustment screw.
- Once the height of the float has been set, check that the water supply cuts off at the desired water level (re-adjust the float height if necessary).

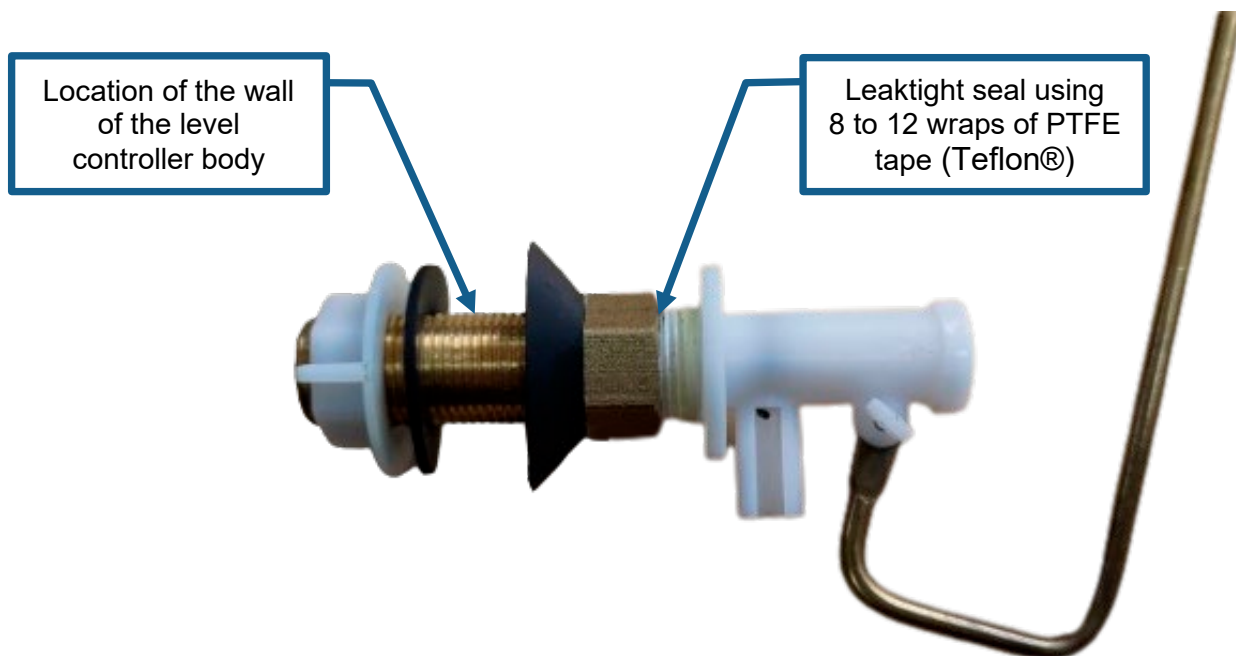

4. Care and maintenance

To prevent any risk of seizing of the valve, regular inspections are necessary.

WARNING

The M/F 40 mm 3/8" brass fitting allows the level controller mechanism to be dismantled without having access to the outside of the controller body. However, **it is essential to hold the brass fitting with a wrench when dismantling the level controller system**, so that the two components do not rotate at the same time. If the brass fitting were to turn, this could loosen the nut on the outside of the body, creating a leak where it passes through the wall.

5. Warranty

This product is covered by legal guarantees (known as the legal guarantees of "conformity" and "free of hidden defects") with respect to the end consumer.

Notes



PLC with a share capital of €7,000,000 - Register of commerce /Rennes B 333263846000 37

